

Instructions For:

# Fold 'N Go Sign Frame



## Product Specifications

Visible Graphic: 24" W x 18" H

### Product Parts

- 1 - Hinged frame
- 2 - Clips (x2)



### Step 1

Stand the hinged frame (1) upright. Spread the legs front and back until it stands on its' own.



### Step 2

Open the clips (2) and slip the angled end through the grommets in the sign or banner.



### Step 3

Now insert the clip (2) end into the holes on the hinged frame. Close the clips to secure into place.

