

Instructions For:

Everyday Table Top Banner Display

 


Product Specifications

Visible Graphic: 18" up to 24" wide x 24" up to 45" high
Total Graphic Print Size: 18" up to 24" wide x 24" up to 45" high
Pole Pockets: 2" to 3" for Top and Bottom Pole Pockets to fit 3/8" Dowels
Colors: Black
Foot Print Dimensions: 13 1/4" x 13 1/4"

Product Parts

- 1 - Base Plate
- 2 - Base Pole
- 3 - Top Pole
- 4 - Upper Dowel Holder
- 5 - Lower Dowel Holder
- 6 - Allen Wrench included
- 7 - Silver Screw
- 8 - Black Screw
- 9 - Thumbscrew (Qty 2)

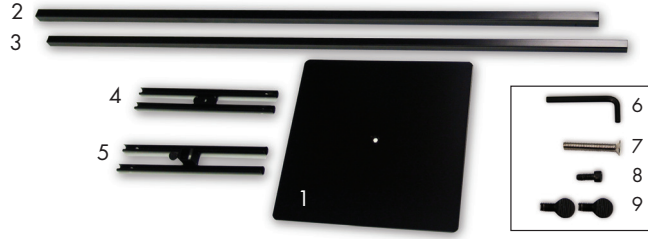

Step 1

Remove all parts from the bag. Place the unit on the ground/work surface

 
Step 2

Before attaching the Base Plate (1), slide the Lower Dowel Holder (5), open side up, over the bottom of the Base Pole (2) and tighten with the Thumbscrew (9). The smooth end of the Base Pole (2) is the bottom, the top end has a wing nut receptor.



Step 3


Insert the raised area of the Base Plate (1) into the bottom of the Base Pole (2) and secure by inserting the Silver Screw (7) up through the bottom of the Base Plate (1) as shown below. Tighten the with the provided Allen Wrench (6).

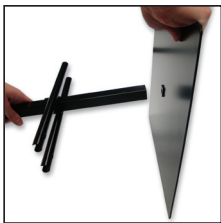

Step 4

Insert the bottom of the Top Pole (3) into the top of the Base Pole (2). The bottom of the Top Pole (3) has the open end.

 You can secure the desired height of Top Pole (3) with the Thumbscrew (9) in the Base Pole (2).

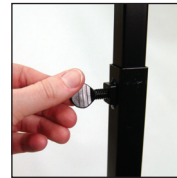

Step 5

Attach the Top Dowel Holder (4) to the Top Pole (3) with the Black Screw (8). Tighten the screw with the included Allen Wrench (6).

