


Product Specifications

Recommended Graphic Size: 24" w x 36" h
 Maximum Graphic Size: 36" w x 46" h
 Color: Black
 Footprint Dimensions: 39" x 30"
 Graphic Template Available

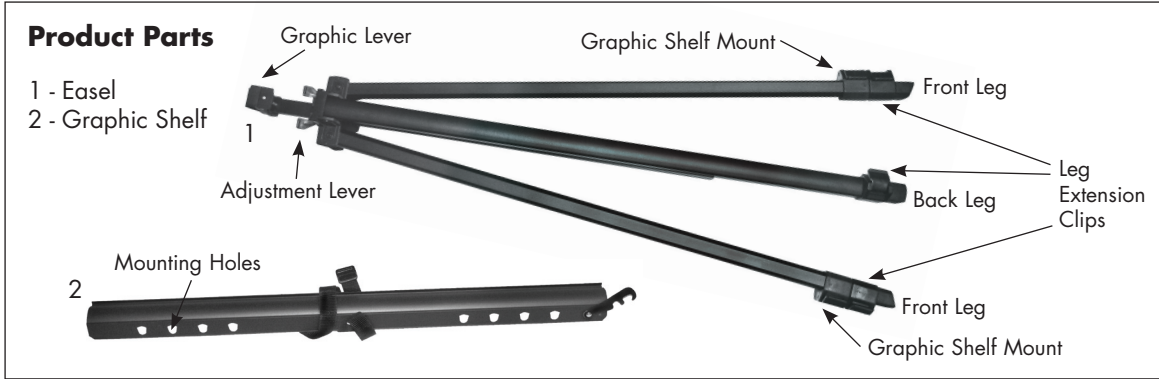

Display Set-Up

 
Step 1

Take all parts out of the bag. Unfasten the Storage Strap and place the easel on a clean floor.



Step 2

Open the Leg Extension Clips and extend the Front and Back Legs to desired height. Firmly close the Leg Extension Clips.




Step 3

Stand the unit upright by spreading the Front Legs while pushing the Back Leg backwards. (The Front Legs have Graphic Shelf Mounts while the Back Leg does not.)



Step 4

Adjust the Mount Handles on the Graphic Shelf Mounts to the desired height by twisting to tighten and un-tighten (this will hold the bottom of the Graphic in place).

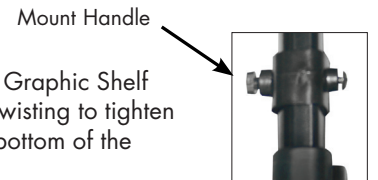


Step 5

Slip the Easel's (1) Mount Screws into the Mounting Holes on the Graphic Shelf (2).




Step 6

Lift the Adjustment Lever to 45 degrees to adjust the height of the Easel's (1) Top Pole. Press the Adjustment Lever down to secure in place.

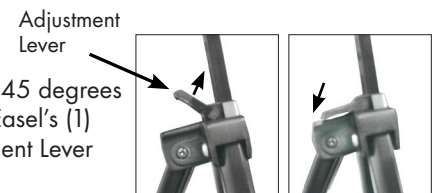

Step 7

Rest the bottom of the Graphic on the Graphic Shelf (2) and lift the Graphic Lever. Adjust the Graphic Clamp by moving it forward, to firmly hold the top of the Graphic in place. Lower the Graphic Lever to secure.

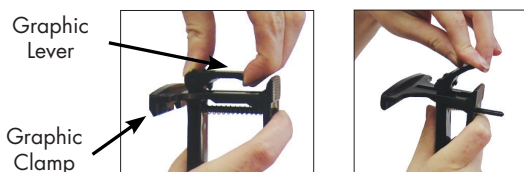

Storage

Place all product parts into Carry Case and store in a cool, dry location.



Care

To clean, wipe with damp cloth.