


Instructions For:

4' Presenter

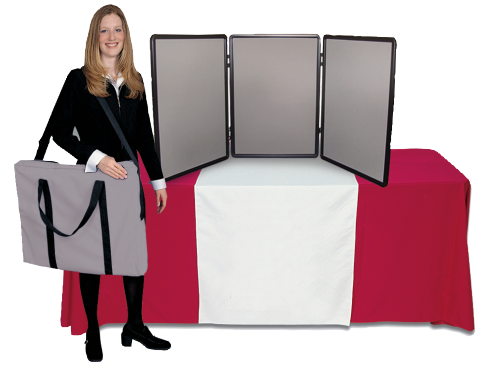


Product Specifications

Color Options: Red, Blue, Gray, Black

Vertical Panel Size:	Top Panel Size:	Frame Dimensions:	Footprint Size:
18" W x 25" H	18" W x 8" H	54" W x 33" H	48" W x 8" D

Product Parts

- 1 - Side Panels
- 2 - Center Panel
- 3 - Header Panel
- 4 - Header Connector
- 5 - Hook & Loop Receptive Fabric one side,
Dry Erase Board on the other side

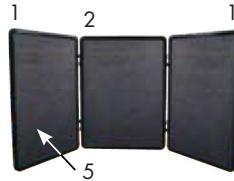

Step 1

Take all parts out of the bag.



Step 4

To attach Graphics to the unit, affix the Hook portion of Hook and Loop dots or strips to the back of your Graphic. Firmly press the Graphic to the Hook & Loop Receptive Fabric (3) on the surface of the unit.

Step 2

Stand the unit upright on a table, and pull the Side Panels (1) away from the Center Panel (2) until the unit is straight. Then, pull the Side Panels forward at an angle from the Center Panel until the unit stands upright on its own.



Step 3

Attach the Header Connector (4) to the bottom of the Header Panel (3)
Attach the Header Connector to the top of the Center Panel (2).

