

Instructions For:

Presto Deluxe Canopy




Product Specifications

Thermal Peak Maximum Imprint Size: 40" W x 15" H
Thermal Overhang Maximum Imprint Size: 48" W x 8" H
Dye Sub Graphic Dimensions: See Template
Foot Print Dimensions: 10' x 10'

Product Parts


- 1 - Canopy frame
- 2 - Fabric Canopy Top

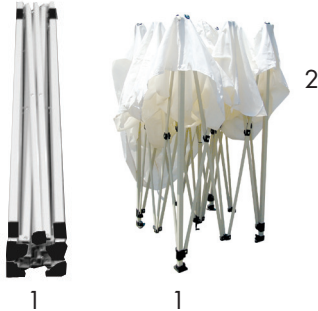

Step 1


Take all parts out of the bag. Stand Canopy Frame (1) upright. Pull outward on diagonal legs until the unit is about 4 feet wide.

Lay the Fabric Canopy Top (2) over the frame.

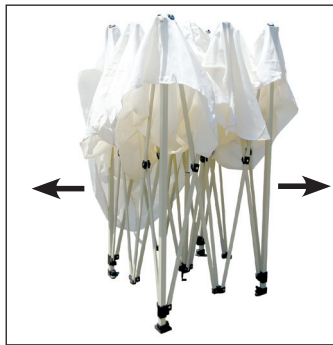


Step 2

Each corner in turn, find the top seam of the corners of the valance (overhang) and line them up with the corners of the Canopy Frame (1). Align both edges of the corner velcro inside of the Fabric Canopy Top (2) with the velcro on the top of the Canopy Frame (1) and press firmly to adhere Fabric Canopy Top (2) to the Canopy Frame (1).

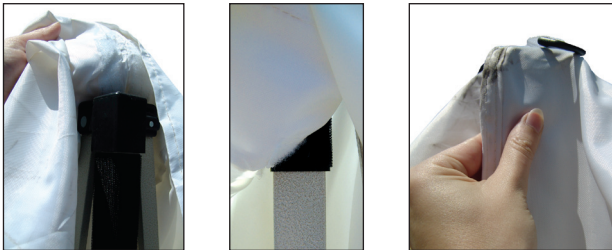


Step 3

Be sure that the tip of the peak of the Fabric Canopy Top (2) is resting over the center bump of the Canopy Frame (1). With another person, continue to pull on diagonal legs until the unit is nearly its full width.

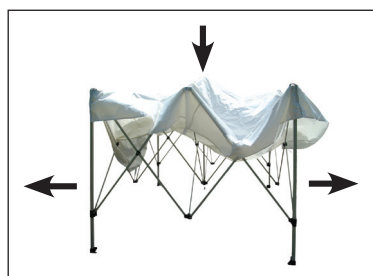

Step 4

On the top of each leg, push up on the black corner hub until it clicks into place. Pull the corners of the Fabric Canopy Top down until they cover the black corner hubs.

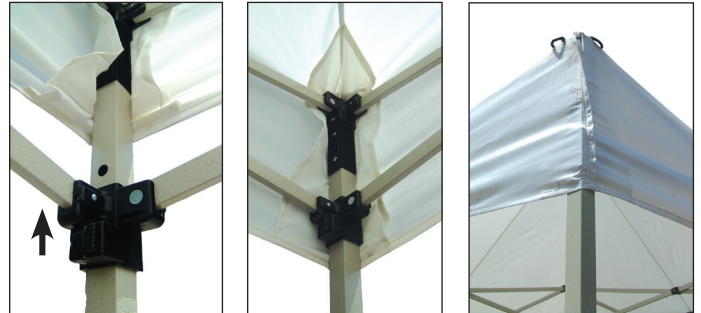

Step 5

On the center of each side of the Fabric Canopy Top (2) tie the velcro strips around the frame. At the center of the Canopy Frame (1), rotate the crank until the Fabric Top is pulled taut. Click the crank closed to lock in place.



Step 6

Extend each leg until they click at their full height.



Take-Down

Lower the legs by pressing the button on each leg. Press the button on the black hubs to release the frame's tension. Leave the Fabric Canopy Top in place, and push frame towards center until fully collapsed.

